

Interface cable instructions:

1. Install Tracpac and/or TTerm on your PC
2. Ensure your victor is powered off
3. Connect the interface cable to the victor the arrow on the black connector will point away from the victors heatsink (the cable will be near the top of the victor)
4. Boot up your pc
5. Connect the 9 pin serial plug to your PC
6. Turn on the victor
7. Start TTerm and ensure it is connected using the serial port
8. Press shift? (hold the shift key down and press the question mark key)
9. You will see the victor main menu appear on your screen
10. You can use your PC to control the victor
11. While charging or discharging you will see the graph on your PC
12. Instead of using TTerm you can use Tracpac

Set baud rates to 9600, no parity, 8 bit data, 1 stop bit, no echo

To install tracpac unzip all applications to a tracpac directory and run TP

If you have any problems please me at [webmaster@rccar.com.au](mailto:webmaster@rccar.com.au)